

[\[Main \]](#)[\[Setup \]](#)[\[Status \]](#)[\[Utilities \]](#)[\[Help \]](#)

Advanced Setup

[WAN IP Address](#)
[Wireless Settings](#)
[LAN IP Address](#)
[DHCP Server](#)
[Services Blocking](#)
[Website Blocking](#)
[VPN Pass Through](#)
[Remote Management](#)
[Port Forwarding](#)
[DMZ Hosting](#)
[Firewall](#)
[Dynamic Routing](#)
[NAT](#)
[Static Routing](#)
[MAC Address Cloning](#)

Save and Restart

Static Routing

Please enter static routes. "Subnet IP" is the IP address of the subnet being defined. "Subnet Mask" is the subnet mask of the subnet being defined. "Gateway IP" is the IP address of the gateway and can be empty for the local subnet.

Subnet IP**Subnet Mask****Gateway IP**

Static Routing Table

| |
|-------------------------------------|
| 216.17.170.96/255.255.255.248,local |
|-------------------------------------|